Support downlink configure  Modify keep alive interval to 5 mins.	0
Modify keep alive interval to 5 mins.	
	Χ
The default minimum "keep-alive time" is changed to 15 seconds	Χ
Adjust interrupt flow when the sensor is in no water status(keep 30 sec).	Х
Modify the battery voltage detection time by 10 minutes.	0
Add IN865 ISM Band.	0
Modify decibel range and threshold range from 40 to 100.	Х
Modify test mode timing from (3,3,6,6) to (2,2)	Х
	Х
Add AS923_2 ISM Band	0
Modify Rxparameter MAC command flow to avoid set FSK datarate.	0
mplement data rate adaptation for confirmed uplink retransmissions.	0
The confirmed uplink count will add 1 when the sensor send confirmed uplink every 8 times.	0
Modify ADRACKReq related flow.	0
Fix AS923 ADRACKReq issue when UplinkDewellTime = 1.	0
Fix new FSK Channel issue.()	0
Fix LinkADRRequest enable all channels issue.	0
Fix KPN new channel issue.	0
Add KR920 LBT ISM Band.	0
Fix Bug 4073 "Switch to Moving Mode from Stationary Mode, Always show the "Outdoor Mode"."	Х
, , , ,	X
Fix Bug 4222 "Failed to trigger the uplink anymore when config the GPS mode under stationary status."	Х
Fix Bug 4223 "Failed to trigger the uplink anymore when config the GPS mode under moving status."	X
	X
K V V V V V V V V V V V V V V V V V V V	Indigital interrupt flow when the sensor is in no water status(keep 30 sec).  Indigital through the battery voltage detection time by 10 minutes.  Indigital through the battery voltage detection time by 10 minutes.  Indigital through the battery voltage detection time by 10 minutes.  Indigital through through through through through the battery voltage and threshold range from 40 to 100.  Indigital through thro